INSTALLATION GUIDE
ANTENNA VECTOR V-PRO 16 dBi 3.5 GHz - 90

1. After unpacking there you should find for your disposal elements like on picture below. In case that there will not be all elements from the list, please contact with vendor.

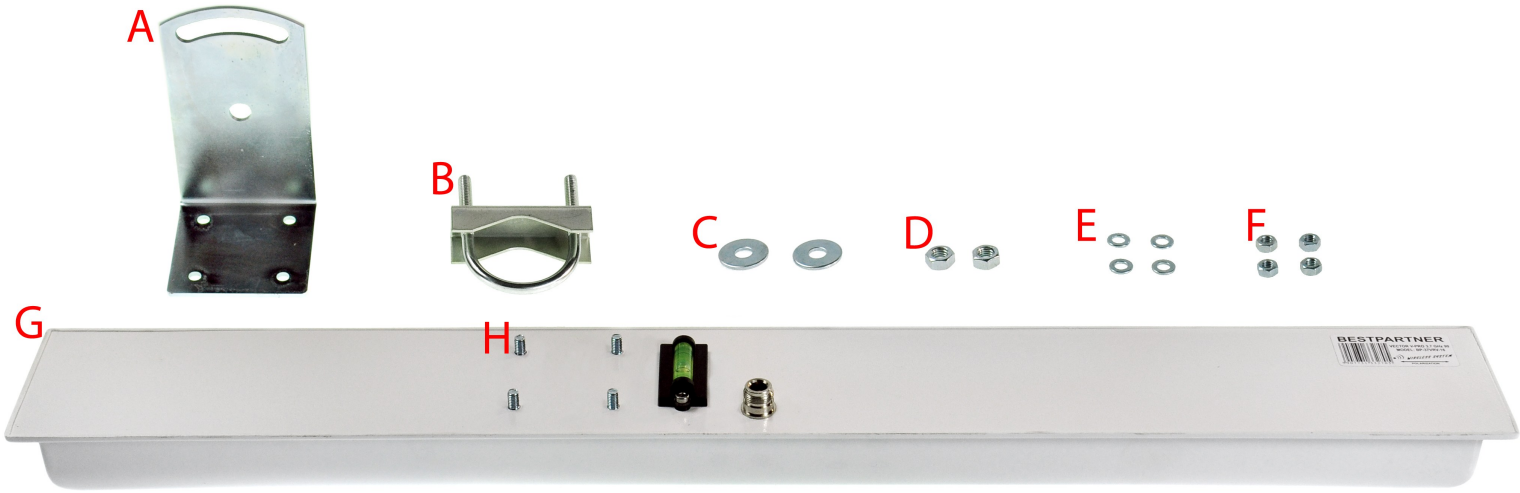

A	Holder
B	Clamp
C	2 washers to install clamp B to holder A
D	2 nuts to install clamp B to holder A
E	4 washers to install holder A to threads at the back of antenna H
F	4 nuts to install holder A to threads at the back of antenna H
G	Antenna
H	4 threads at the back of antenna to install holder A

I. For tightening nuts we are using metric key 10 and 13.

2. Put holder A on screws from the antenna like on picture below.

3. Put pads and after that nuts on screws. Twist screws properly.

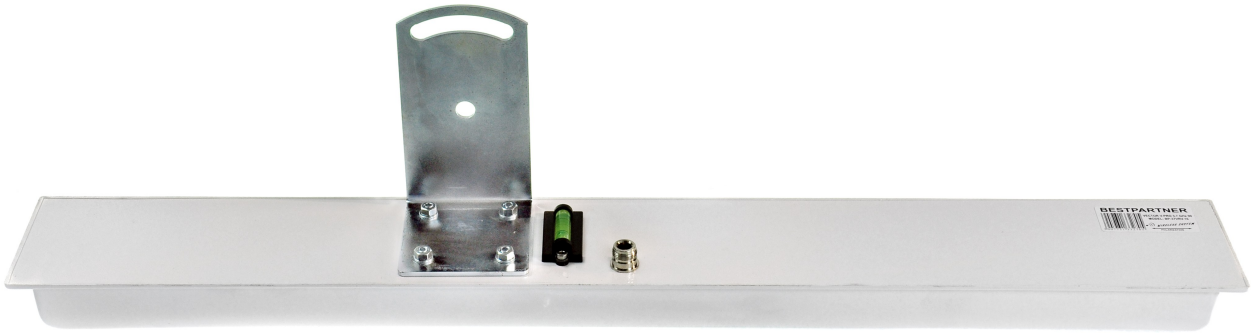

4. Put into holes in holder A clamp B

5. Put pads and after that nuts on clamp screws. Twist screws properly.

6. Install antenna on mast and twist the clamp.