


# INSTALLATION GUIDE

## ANTENNA VECTOR V-PRO 18 dBi 6 GHz - 90

1. After unpacking there you should find for your disposal elements like on picture below. In case that there will not be all elements from the list, please contact with vendor.

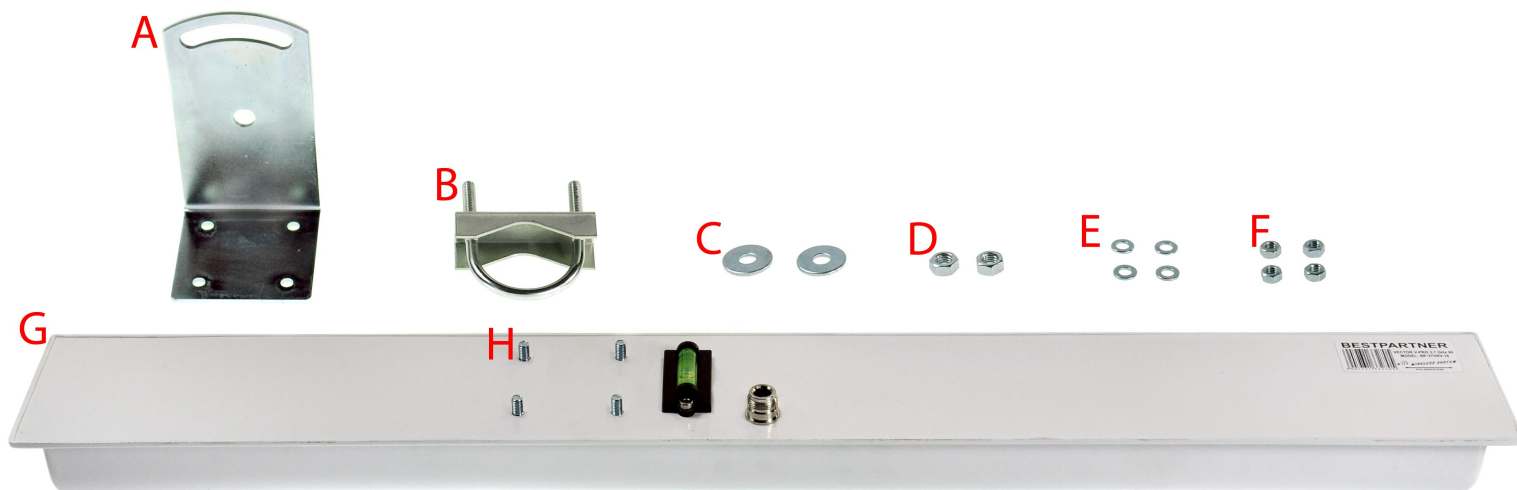

|          |   |
|----------|---|
| <b>A</b> | Holder  |
| <b>B</b> | Clamp   |
| <b>C</b> | 2 washers to install clamp <b>B</b> to holder <b>A</b>                          |
| <b>D</b> | 2 nuts to install clamp <b>B</b> to holder <b>A</b>                             |
| <b>E</b> | 4 washers to install holder <b>A</b> to threads at the back of antenna <b>H</b> |
| <b>F</b> | 4 nuts to install holder <b>A</b> to threads at the back of antenna <b>H</b>    |
| <b>G</b> | Antenna   |
| <b>H</b> | 4 threads at the back of antenna to install holder <b>A</b>                     |


I. For tightening nuts we are using metric key 10 and 13.




2. Put holder **A** on screws from the antenna like on picture below.



3. Put pads and after that nuts on screws. Twist screws properly.

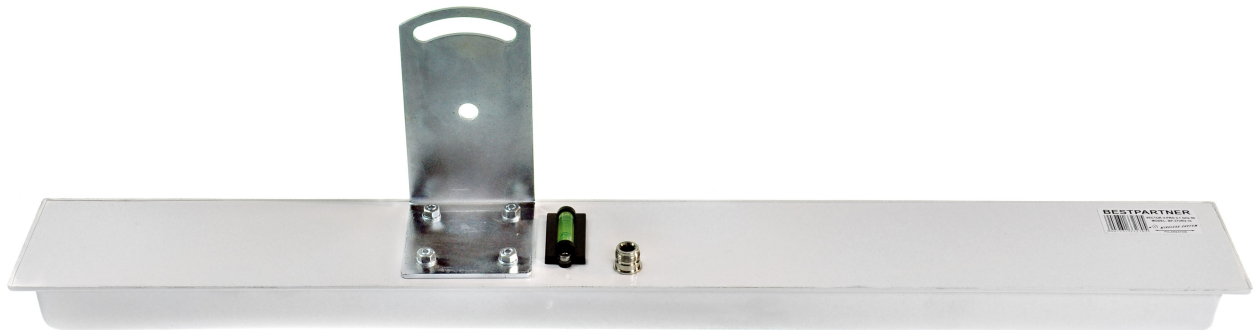

4. Put into holes in holder **A** clamp **B**

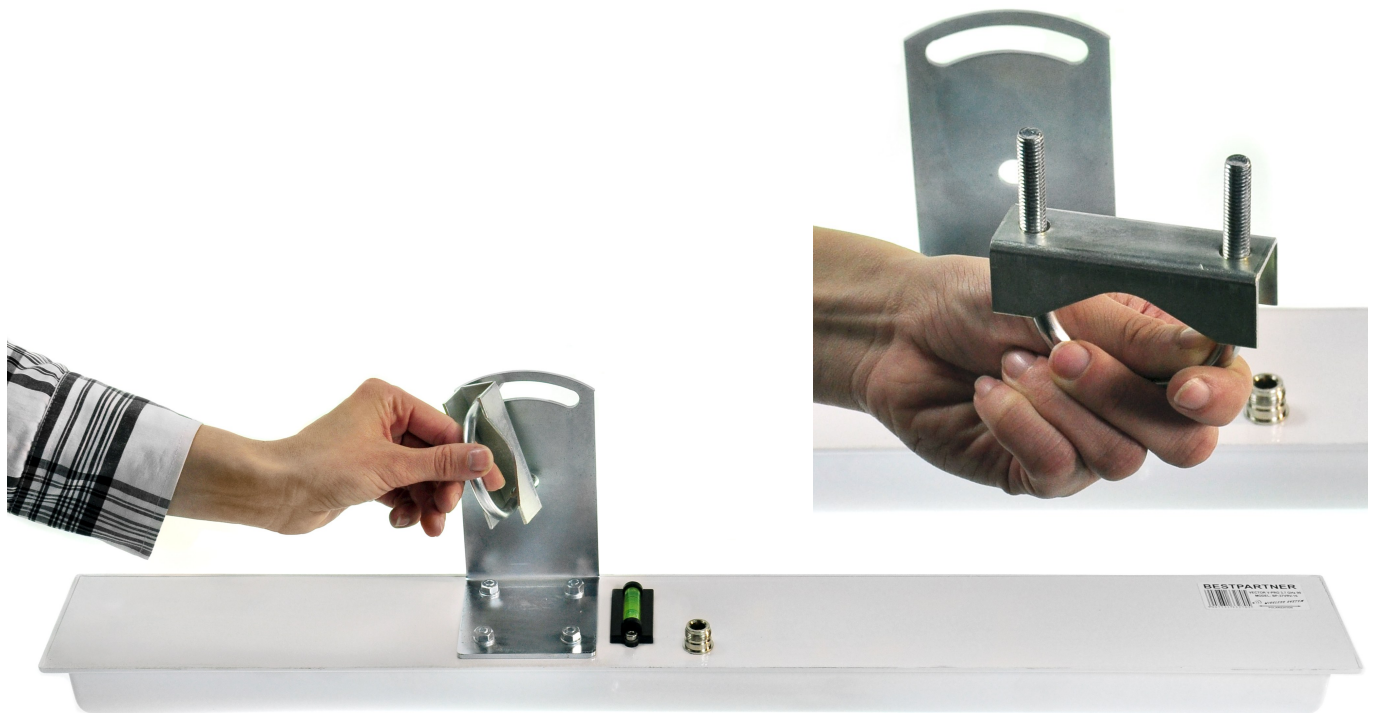

5. Put pads and after that nuts on clamp screws. Twist screws properly.



6. Install antenna on mast and twist the clamp.

