


INSTALLATION GUIDE

ANTENNA VECTOR V-PRO 19 dBi 6 GHz - 60

1. After unpacking there you should find for your disposal elements like on picture below.
In case that there will not be all elements from the list, please contact with vendor.

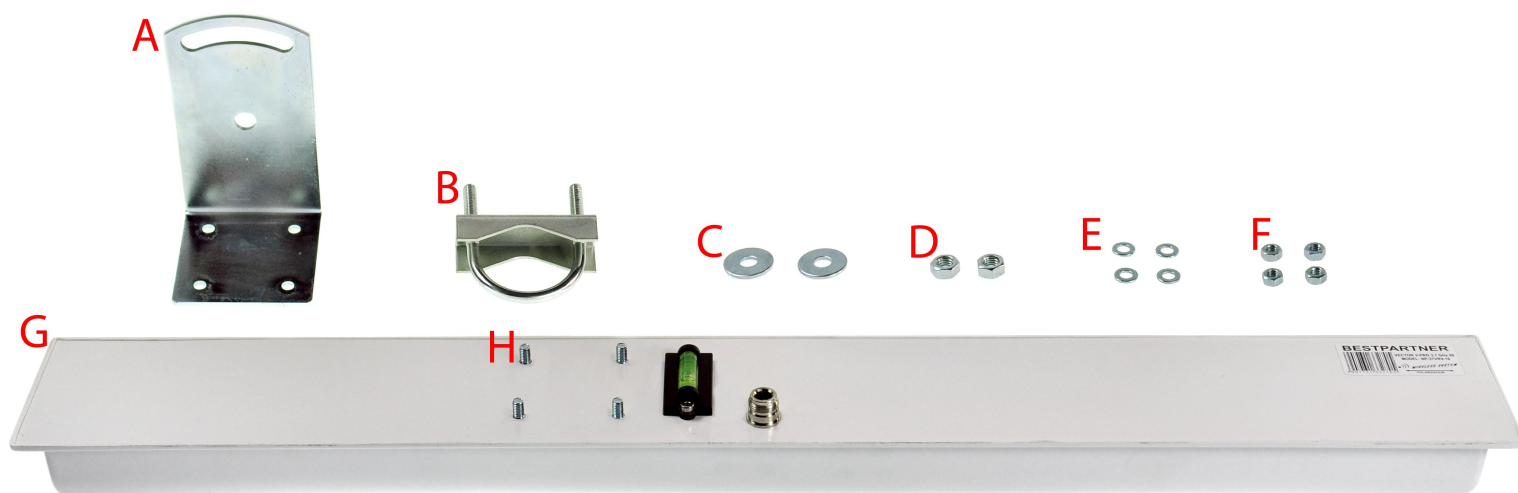

A	Holder
B	Clamp
C	2 washers to install clamp B to holder A
D	2 nuts to install clamp B to holder A
E	4 washers to install holder A to threads at the back of antenna H
F	4 nuts to install holder A to threads at the back of antenna H
G	Antenna
H	4 threads at the back of antenna to install holder A


I. For tightening nuts we are using metric key 10 and 13.




2. Put holder **A** on screws from the antenna like on picture below.



3. Put pads and after that nuts on screws. Twist screws properly.

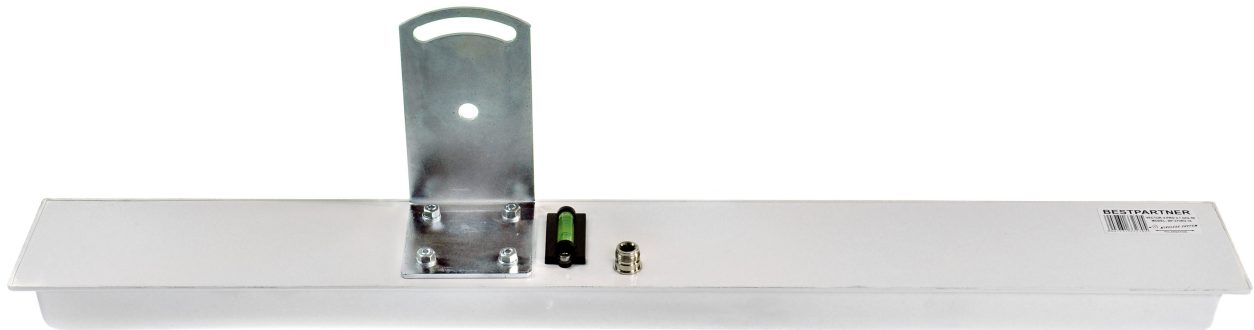

4. Put into holes in holder **A** clamp **B**

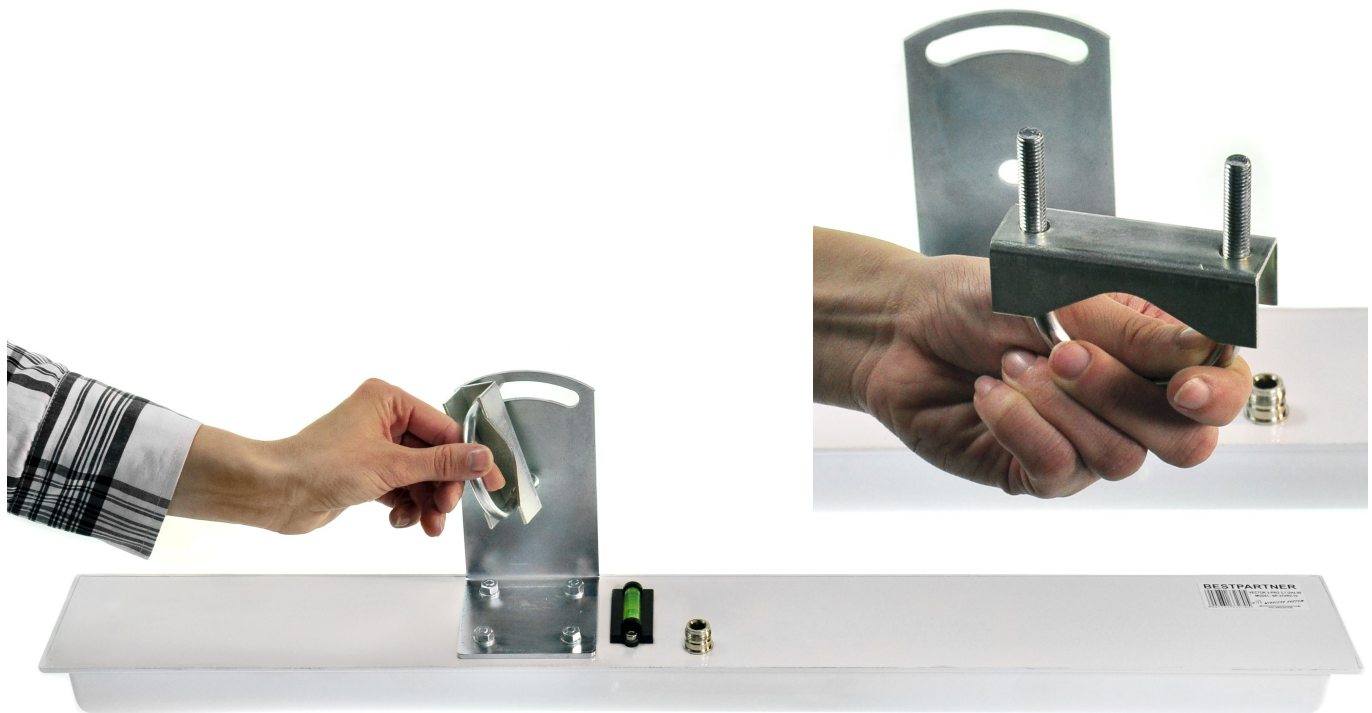

5. Put pads and after that nuts on clamp screws. Twist screws properly.



6. Install antenna on mast and twist the clamp.

